


AIR GAP SEPARATION

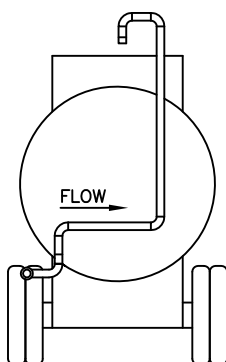

NOTES:

1. ALL PIPING PRIOR TO AIR GAP MUST BE MOUNTED PERMANENTLY TO THE EXTERIOR OF THE TANK, AND CLEARLY VISIBLE.
2. AIR GAP MUST BE AT LEAST (2) TIMES THE FILL PIPE DIAMETER FROM THE OVERFLOW RIM BUT IN NO CASE LESS THAN A (1) INCH MINIMUM GAP. (SEE DETAIL A)
3. NO INTERNALLY MOUNTED AIR GAP PIPING IS PERMITTED.
4. OBTAIN HYDRANT METER FROM DSRSD.

Dublin San Ramon Services District

REVISION DATE
MAR 2012

BACKFLOW PREVENTION METHOD FOR TANKER
TRUCKS AND PORTABLE SPRAY RIGS

REVISED BY
BCD

SIGNED COPY ON FILE AT DISTRICT OFFICE

DRAWING
W-5