


AIR GAP SEPARATION

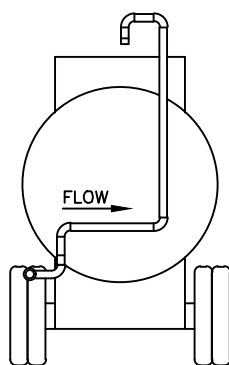

**NOTES:**

1. ALL PIPING PRIOR TO AIR GAP MUST BE MOUNTED PERMANENTLY TO THE EXTERIOR OF THE TANK, AND CLEARLY VISIBLE.
2. AIR GAP MUST BE AT LEAST (2) TIMES THE FILL PIPE DIAMETER FROM THE OVERFLOW RIM BUT IN NO CASE LESS THAN A (1) INCH MINIMUM GAP. (SEE DETAIL A)
3. NO INTERNALLY MOUNTED AIR GAP PIPING IS PERMITTED.
4. OBTAIN HYDRANT METER FROM DSRSD.

Dublin San Ramon Services District	REVISION DATE MAR 2012
BACKFLOW PREVENTION METHOD FOR TANKER TRUCKS AND PORTABLE SPRAY RIGS	REVISED BY BCD
SIGNED COPY ON FILE AT DISTRICT OFFICE	DRAWING W-5